


Burbank Morse Key Wiring Diagram

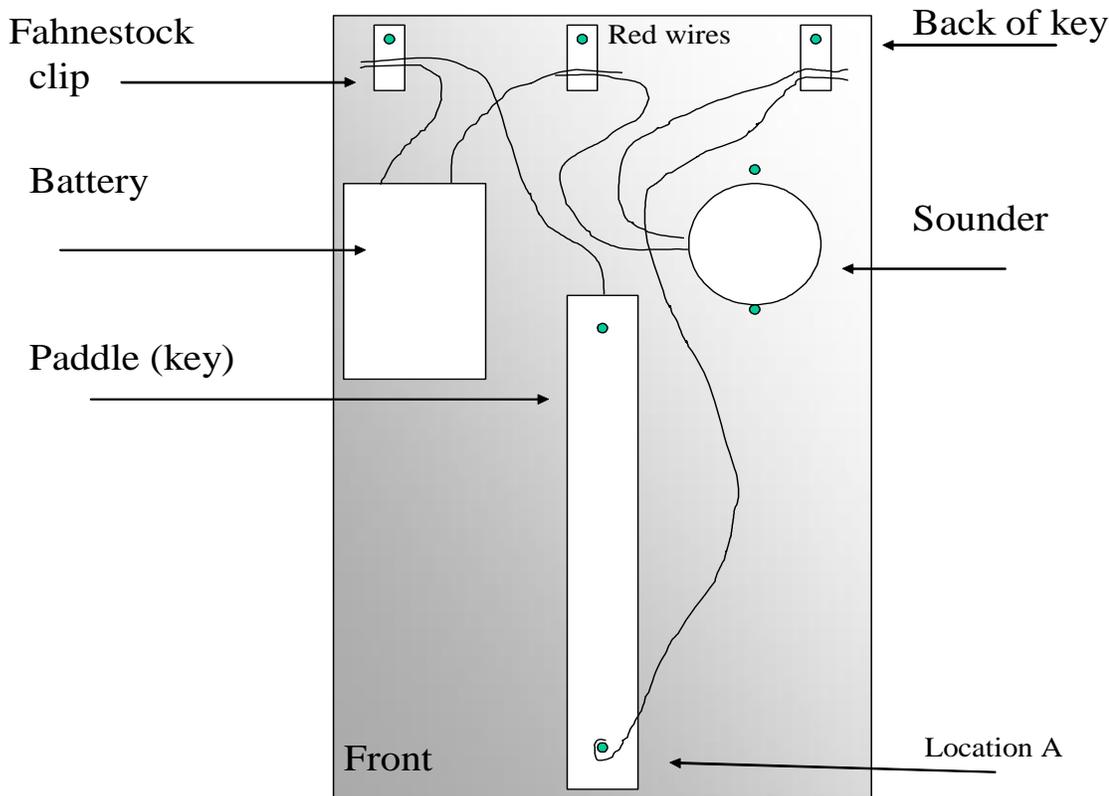

1. Red wires from battery clip and sounder unit attach to middle clip.
2. Black wires from battery clip and rear paddle connection attach to left clip
3. Black wires from front of paddle and sounder unit attach to right clip.
4. Each connection clip has two wires.
5. Front of key must be raised up from screw at Location A, when not pressed down. This will allow proper switch (keying) action, where the sounder will buzz only when key is pressed. Insert a wedge under paddle near back of key near rear mounting screw to lift the front of the paddle up slightly, if necessary.